

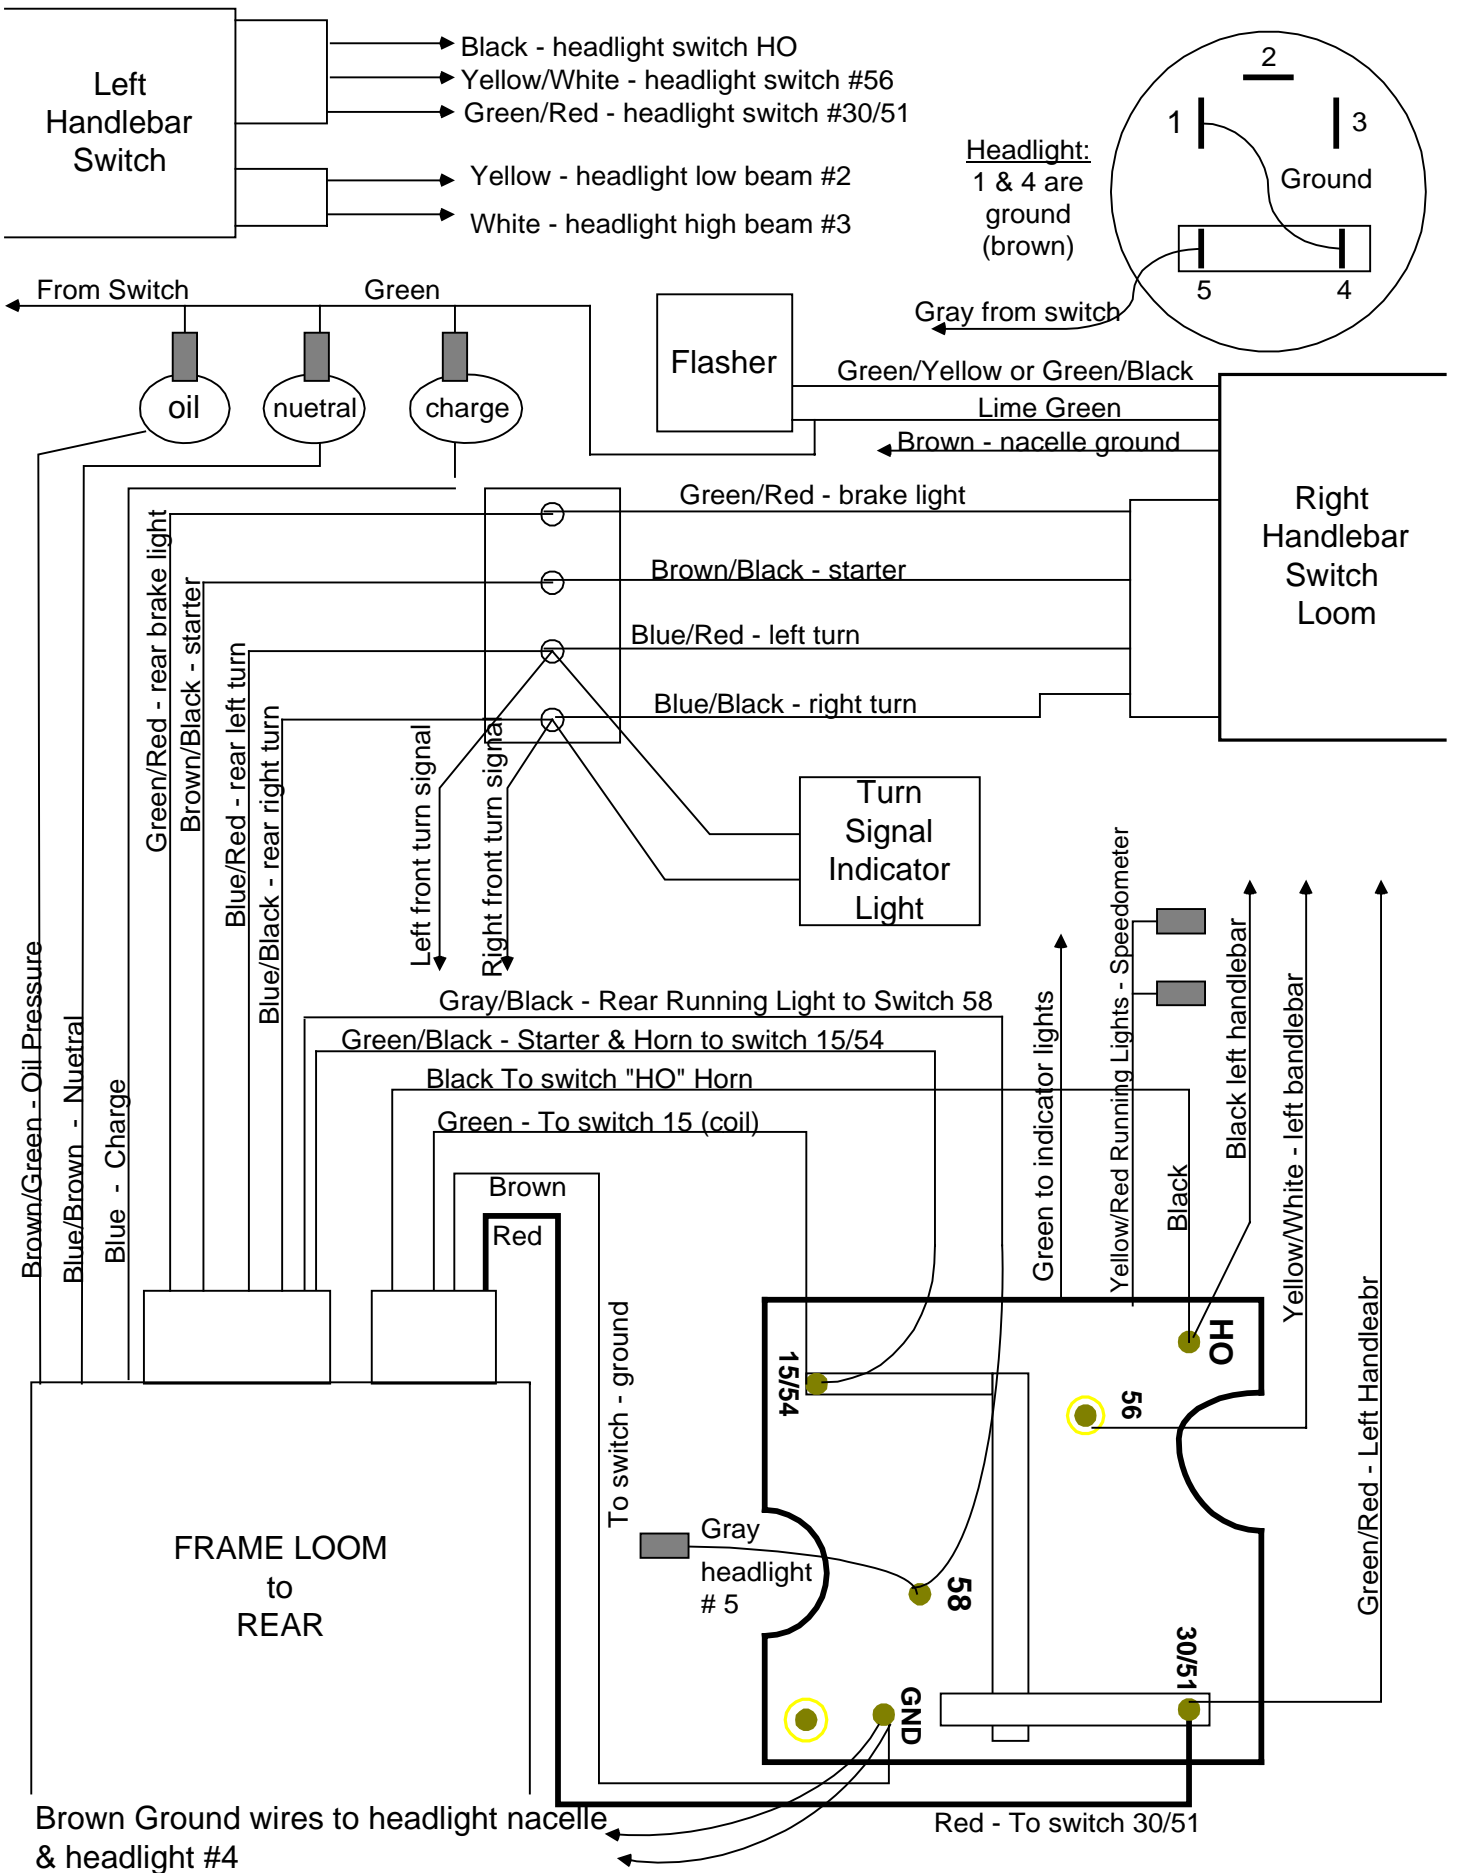
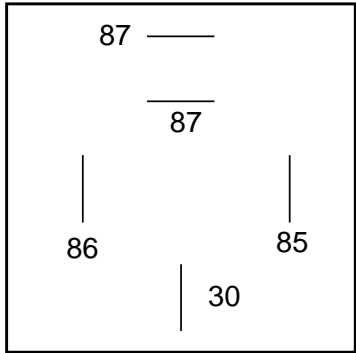


Wiring Diagram - 1970 BMW R75/5 (no fuse) Nick Grear

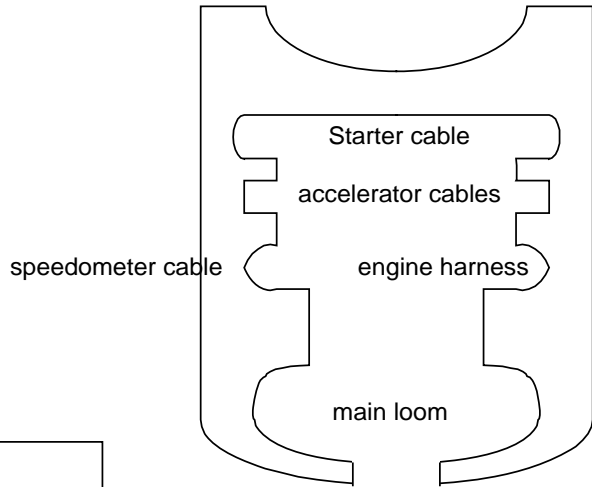

Page 3 of 4 - 1970 BMW Wiring Diagram

BMW Starter Relay

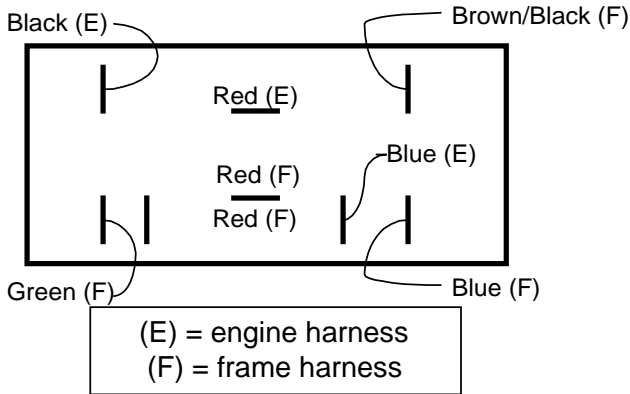

Bosch Starter Relay:

87 Red (two) 12v to battery

30 Black (large) To Starter Solenoid

85 Brwn/Black (/5) Starter Button Grnd
Brwn/Yellow (/6)
Blue/Yellow (/6)

86 Green/Black Relay Power Supply

Permanently connect the two blue wires together and insulate well (charging light)

